



MOVIKIT[®] Licensing

Step-by-step instruction to activate a license key



Contents

1	Preparation.....	3
1.1	Preparation of PC-software and drivers.....	3
1.2	Check the installed MOVISUITE® version and module package.....	3
2	Connect to the inverter via MOVISUITE® and check application level.....	4
2.1	Start the MOVISUITE® software.....	4
2.2	Configure communication port.....	4
2.3	Scan the device.....	4
3	Update process.....	5
3.1	Order the software license	5
3.2	Activate the license in the License Manager in MOVISUITE®.....	6
3.3	Get SMID number from MOVI-C® CONTROLLER memory card	7
3.4	Access the license manager on the SEW-EURODRIVE website.....	8
3.4.1	Go to SEW's website.....	8
3.4.2	Create an activation key for the license on the SEW-EURODRIVE website	8
3.5	Activate the license in the License Manager in MOVISUITE®.....	9
3.5.1	Activate license via internet.....	10
3.5.2	Activate license by phone	11



1 Preparation

1.1 Preparation of PC-software and drivers

Download and install the latest version of MOVISUITE®. At least version MOVISUITE® 2.10.52.0 is required for all available MOVIKIT® modules. You can download the most recent MOVISUITE software from the [SEW-EURODRIVE website](https://www.sew-eurodrive.com).

Data & documents

CAD data | Documentation | Product data | **Software**

< Back to search

All products MOVISUITE® V2.20

Download selection as a ZIP file

	Designation	Size	Version
<input type="checkbox"/>	Latest: MOVISUITE® V2.20 Basic version (release date: 2021/01/28)	6.29 GB	2.20
<input type="checkbox"/>	Latest: MOVISUITE® V2.20 ModuleUpdatePackage 1 (release date: 26.02.2021)	4.96 GB	2.20

1.2 Check the installed MOVISUITE® version and module package

Click button

Click button “Program information” to check the installed version and module package. It could take a short time until the module package appears.

MOVISUITE® standard

Start | Projects | Contact | Language | Settings | **Program information**

Program information

MOVISUITE® standard

Version V2.20 (2.20.15.0) —
Module package 2.20.15.0




2 Connect to the inverter via MOVISUITE® and check application level

2.1 Start the MOVISUITE® software




2.2 Configure communication port

Please make sure that your computer and the used Ethernet port of the SEW device is in the same IP address range.

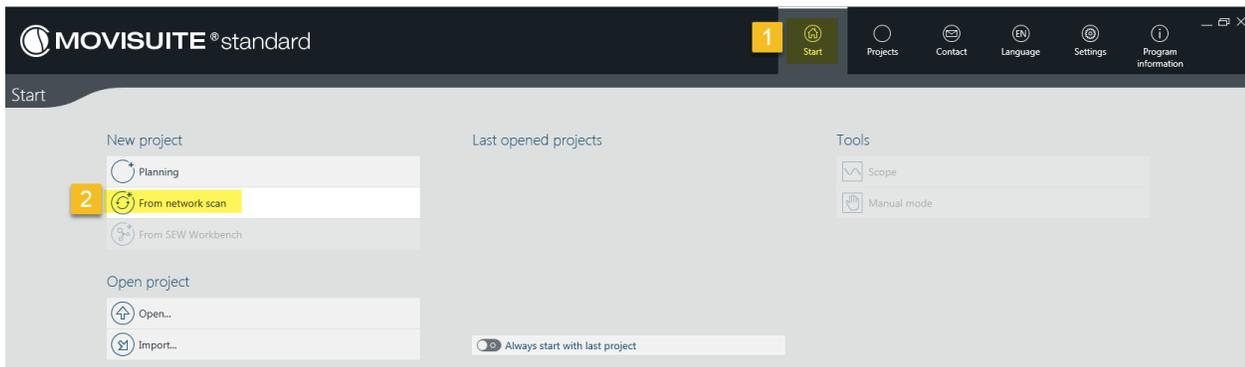

- (1) Click button “Start” in the toolbar.
- (2) Click button “From network scan”.

2.3 Scan the device

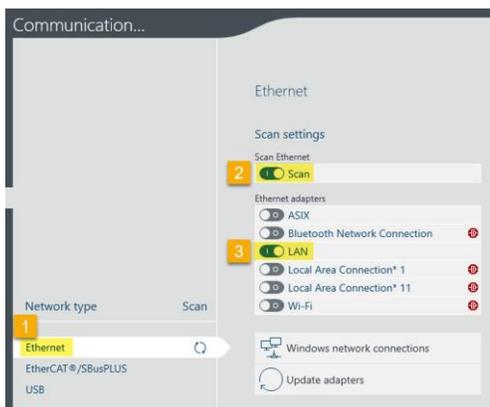





- (1) Select the communication “Ethernet”.
- (2) Select “Scan Ethernet”.
- (3) Select the network adapter connected to the MOVI-C® CONTROLLER – in this case “LAN”.

Click button **Apply and start scan** on the bottom of the screen.

If the network scan was successful, a similar information pops up:

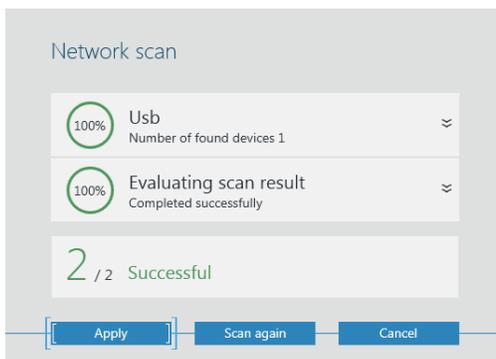

Click button “Apply”.

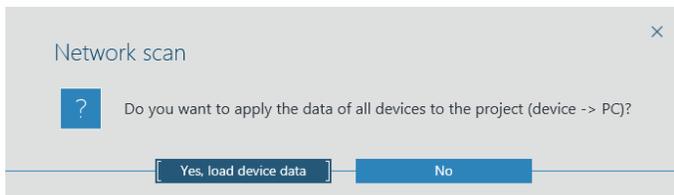

Click button “Yes, load device data”.

3 Update process

3.1 Order the software license

Depending on your application, choose the required licenses. Order the licenses from your regular sales contact – the same you ordered the MOVI-C® CONTROLLER from.

The order acknowledgement will show the ordered license keys (sample marked in yellow) which are needed to activate the licenses on your MOVI-C® CONTROLLER.



SEW-EURODRIVE Inc.---Driving the world

Order acknowledgement

Order-No.: [REDACTED]
Order Date: [REDACTED]
Customer no.: [REDACTED]

SEW
EURODRIVE
Page 1 / 5

SEW-EURODRIVE Contact

The license keys are listed at the end of this document.

License keys

position 100:


No. of MultiAxisCtrlr Skewing: 1
AS2RY-[REDACTED]

Number of Gearing: 1
AUPXV-[REDACTED]

No. of StackCraneEffi: 1
ALSQ2-[REDACTED]

3.2 Activate the license in the License Manager in MOVISUITE®

Start under “Tools” the software module “License Manager”.

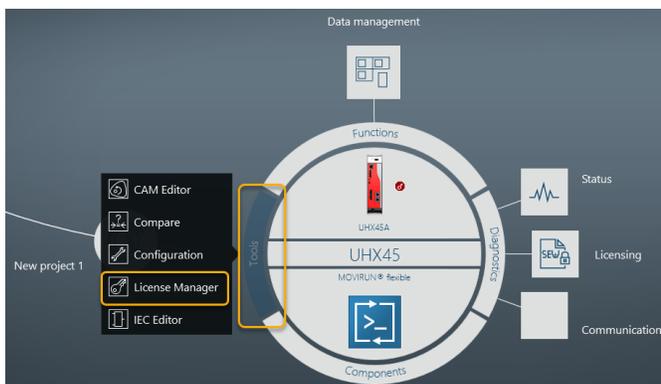




3.3 Get SMID number from MOVI-C® CONTROLLER memory card

There are several possibilities to get the SMID number:


- Check the label of your memory card.



- Within MOVISUITE® configuration menu, index 8438.104.

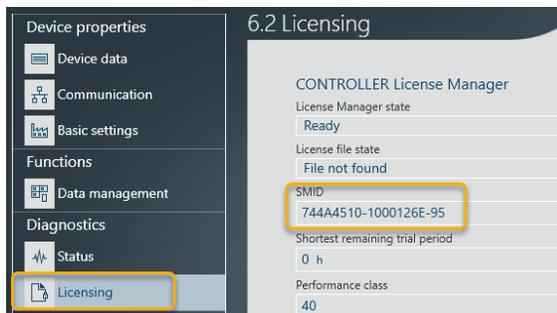

- Within MOVISUITE® License manager, click on the SMID number to copy the number to the clipboard.

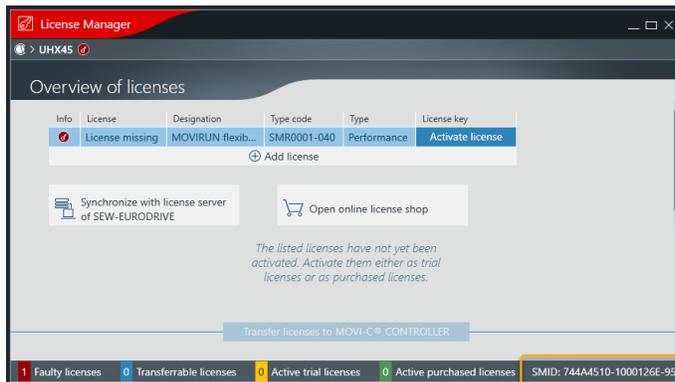




3.4 Access the license manager on the SEW-EURODRIVE website

3.4.1 Go to SEW's website


Go to SEW's website → licensing: [Online Support | SEW-EURODRIVE \(seweurodrive.com\)](https://www.seweurodrive.com/online-support/startup-maintenance/check-activate-software-licenses).

- (1) Click “Online Support”.
- (2) Click “Startup & maintenance”.
- (3) Click “Check & activate software licenses”.

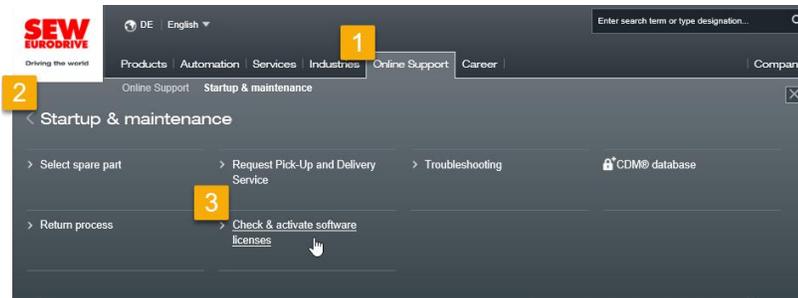

3.4.2 Create an activation key for the license on the SEW-EURODRIVE website

Use your SMID number and license key to generate an activation key. This activation key is needed to activate the license on the controller.

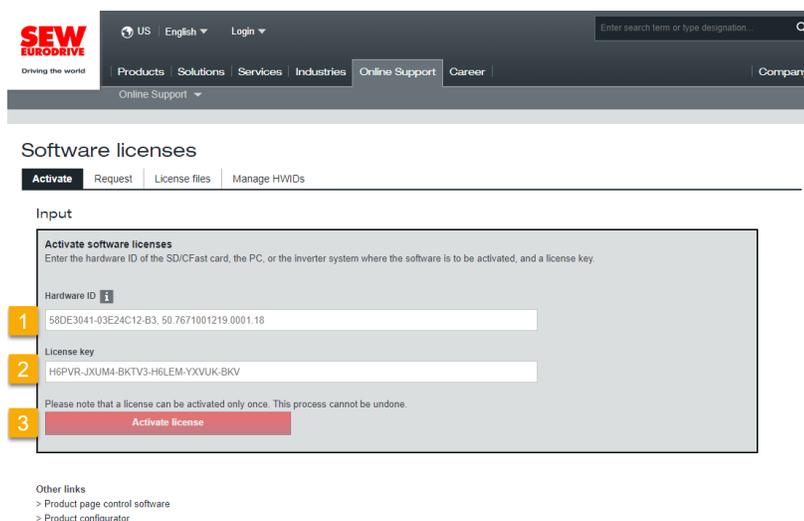


- (1) Enter your SMID number of your device under “Hardware ID”.
- (2) Enter the license key from your Order Acknowledgement.



(3) Click “Activate license” to generate the activation key.


Please note that each license key can be used only once! After you activated the license for one **component**/ SMID number, it cannot be unlinked.

You see the activation code in the result box:

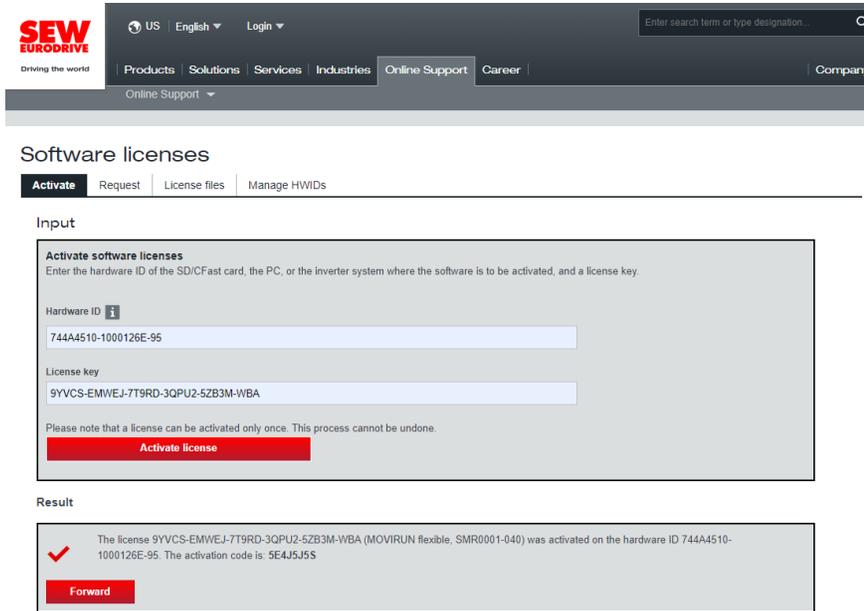


3.5 Activate the license in the License Manager in MOVISUITE®

Start under “Tools” the software module “License Manager”.

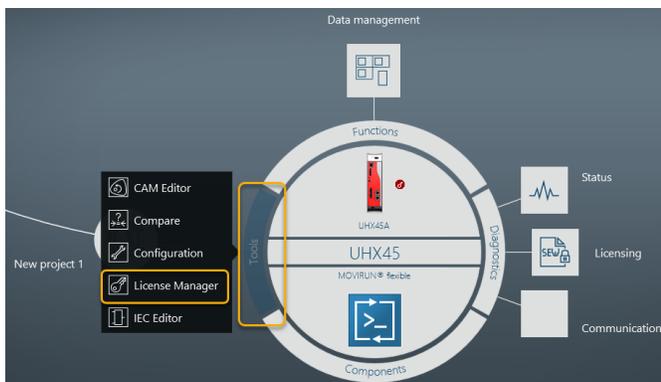



Within the License Manager, if a trial license is in use, click “Activate purchased license” next to the license that you want to activate. If the license is missing, click “Activate license”.

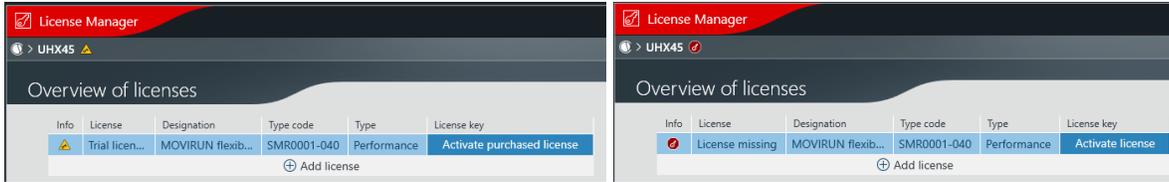


There are two ways, how to activate the license:

- Activate license via internet.
- Activate license via phone.

3.5.1 Activate license via internet


Your computer must be connected with the MOVI-C® CONTROLLER and with the internet!

Enter the license key from your order acknowledgement and click “Activate license”.

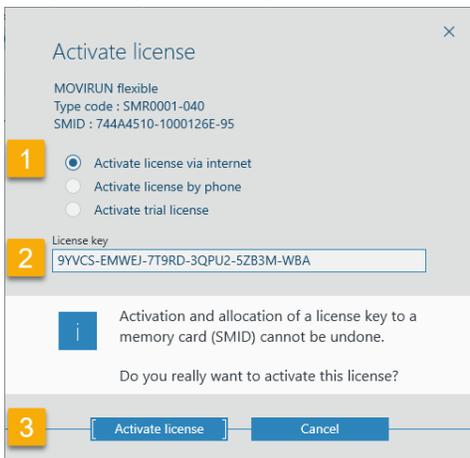




Click “Transfer licenses to MOVI-C® CONTROLLER” to finish the activation process.

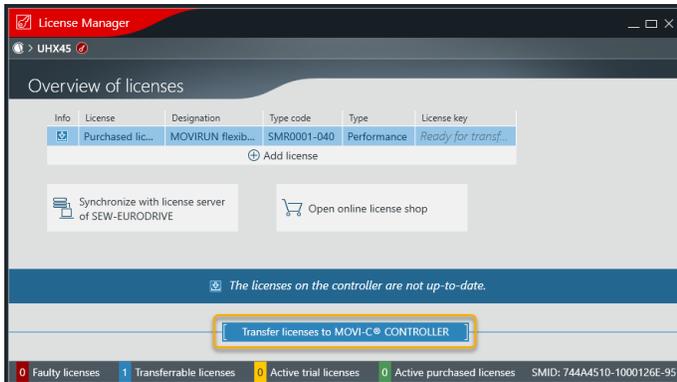

3.5.2 Activate license by phone

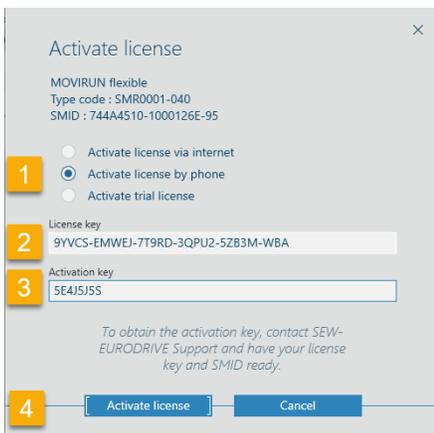

At the end, the license has to be transferred to the controller:

